





A Middleby Company • 10 Sunnen Drive • St. Louis, MO 63143 • 800.807.9054 • FAX 314.781.2714

Solid State Slot Toaster

Models TP209, TP224, TP409, TP424, TP430,
HT409, HT424, BTW09, BTW24

OWNER'S OPERATING AND INSTALLATION MANUAL

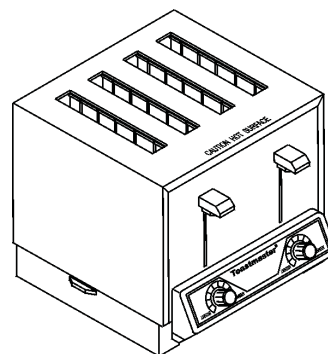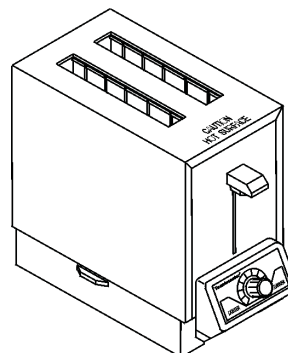

Toastmaster is a registered trademark of Toastmaster, A Middleby Company. All rights reserved.

WARNING: IN CASE OF FIRE

Disconnect the toaster from its power source IMMEDIATELY. This allows the unit to cool, making it easier to put out the fire.

WARNING

FOR YOUR SAFETY DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION AND OPERATING INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

WARNING

DO NOT PICK UP THE TOASTER BY INSERTING FINGERS INTO THE TOASTER SLOTS AND GRASPING THE HEATING ELEMENTS. ELECTRICAL SHOCK AND DAMAGE TO THE HEATING ELEMENTS CAN OCCUR.

WARNING

NEVER INSERT A KNIFE, FORK, OR SIMILAR OBJECT INTO THE TOASTING CHAMBER. ELECTRICAL SHOCK AND DAMAGE TO THE HEATING ELEMENTS CAN OCCUR.

WARNING

DISCONNECT THE UNIT FROM ITS ELECTRICAL POWER SUPPLY BEFORE CLEANING OR SERVICING.

CAUTION

Using any parts other than genuine Toastmaster factory parts relieves the manufacturer of all liability.

IMPORTANT

Contact your authorized service agent to perform maintenance and repairs. A service agency directory is supplied with your toaster.

IMPORTANT

Toastmaster (manufacturer) reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.


RETAIN THIS MANUAL FOR FUTURE REFERENCE

This manual provides detailed information for the installation and operation of your toaster. It also contains information to assist the operator in diagnosing problems in the event of a malfunction. This manual is an important tool for the operator and should be kept readily available.

I. DESCRIPTION AND SPECIFICATIONS

A. Component Location

The major components of the toaster are shown in Figure 1 below.

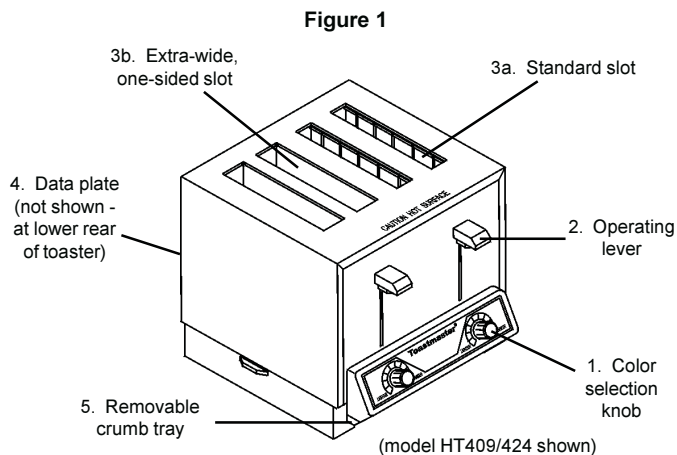

B. Component Function (see Figure 1)

1. Color selection knob - see Section III, **Operation**.
2. Operating lever - see Section III, **Operation**.
- 3a. Standard slot - 1-1/8"/29mm wide, these slots can accommodate "Texas Size" bread, frozen waffles, English muffins, etc. Heating elements are located on both sides of the slot.
- 3b. Extra-wide slot - 1-5/8"/41mm wide, these slots can accommodate bagels and thick English muffins. A heating element is located on one side of the slot, permitting one-sided toasting.
4. Data plate - Provides manufacturing and electrical information.
5. Crumb tray - Collects crumbs from the toasted product. The tray can be removed for cleaning.

C. Toaster Information

Slot information:

	TP209, TP224	TP409, TP424, TP430	HT409, HT424	BTW09, BTW24
Standard slots	2	4	2	0
Extra-wide, one-sided slots	0	0	2	4

NOTE

Electrical specifications are provided on the wiring diagrams at the back of this Manual.

II. INSTALLATION


IMPORTANT

IT IS THE CUSTOMER'S RESPONSIBILITY TO REPORT ANY CONCEALED OR NON-CONCEALED DAMAGE TO THE FREIGHT COMPANY.

A. Installation Options and Kit Availability

Two-slot toasters (TP209/224) are to be installed on a countertop, as described in Part B, *Electrical Utility Connection*, below.

Four-slot toasters (TP409/424/430, HT409/424, BTW09/24) may be installed EITHER on a countertop, OR on the four-slot toaster stand shown in Figure 2, below. The stand (Toastermaster P/N 1D3CS) is not included with your toaster, but is available separately.

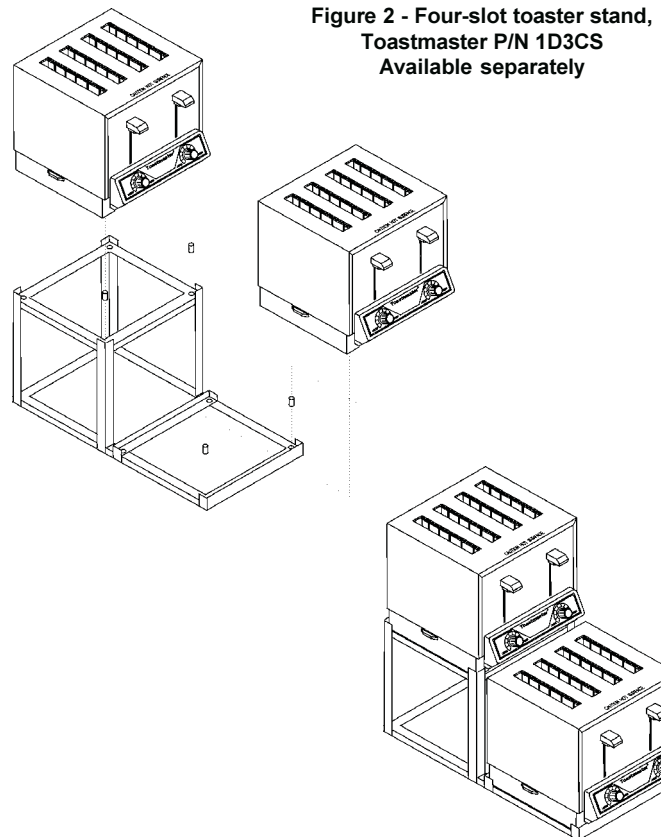

- To install the toaster on a countertop, follow the instructions in Part B, *Electrical Utility Connection*, below.
- To install the toaster on a stand, follow the assembly instructions included with the stand kit. Then, proceed to Part B, *Electrical Utility Connection*.

B. Electrical Utility Connection

1. Position the toaster in place.
2. Before proceeding with the electrical connection, check the following:
 - a. Check that the electrical supply matches the toaster's requirements. Refer to the toaster's data plate (at the lower rear of toaster - see Figure 1), and to the electrical specifications provided on the wiring diagrams at the back of this Manual.
 - b. Check that the appropriate receptacle is available for the power cord plug.
 - c. Check that the main electrical supply source is turned OFF.

CONSULT ALL APPLICABLE NATIONAL AND LOCAL CODES FOR FURTHER ELECTRICAL CONNECTION REQUIREMENTS.



WARNING

ENSURE THAT ANY PACKING MATERIAL RESIDUE HAS BEEN REMOVED FROM INSIDE THE TOASTING CHAMBER.


3. Insert the power cord plug into its receptacle.

III. OPERATION

A. Location and Function of Controls

This section provides a basic description of the toaster controls, their location, and the functions they perform. The operator **MUST** be familiar with the controls. See Figure 3.

Figure 3 -Toaster Controls

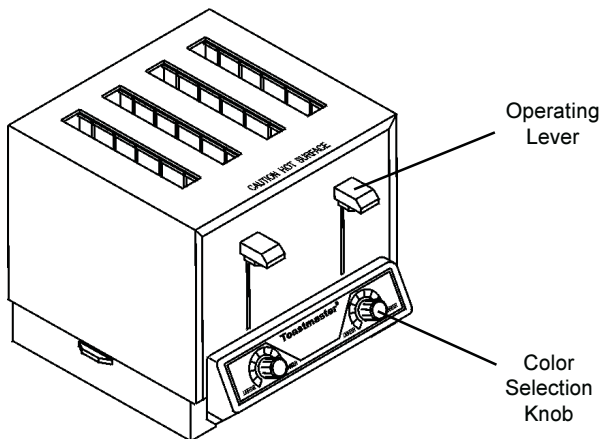

1. **Color Selection Knob**

Adjusts the darkness of the toasted bakery product.

- Turn the knob to the **LEFT** for lighter toasting.
- Turn the knob to the **RIGHT** for darker toasting.

2. **Operating Lever**

- Press the lever **DOWN** to load the bakery product into the toaster.
- Push the lever **UP** to manually raise the product during the toasting cycle. If the operating lever is not raised manually, it will be automatically raised at the end of the toasting cycle.


B. Operation Procedure

CAUTION

THE REMOVABLE CRUMB TRAY MUST BE IN PLACE BEFORE THE TOASTER MAY BE OPERATED. If the tray is removed for cleaning, ensure that it is replaced before operation.

1. Insert the bakery product into the slots. For extra-wide, one-sided slots, check that the side of the product that is to be toasted faces the **LEFT** side of the slot, as shown in Figure 4.

Figure 4 - Loading extra-wide, one-sided slots
Models HT409/424, BTW09/24 only

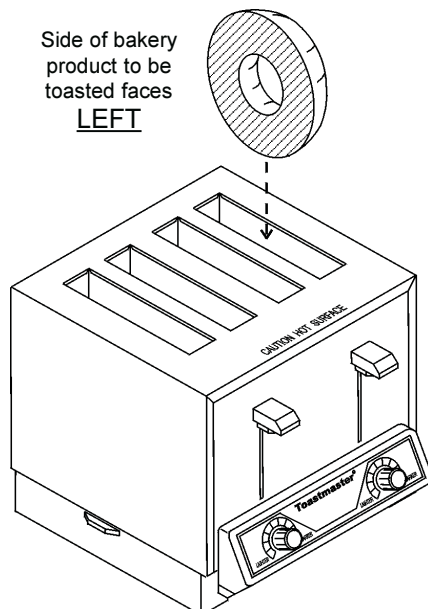

2. Turn the color selection knob (if necessary) to set the desired darkness. A medium color setting is achieved at the 9 o'clock position.

NOTE

It will be necessary to determine the color setting for each different bakery product that is to be toasted. Test a single piece at the 9 o'clock setting, and then adjust the Color Selection Knob as necessary to find the proper setting.

3. Press the Operating Lever **DOWN** to lower the product into the toasting chambers.
4. Wait for the toasting cycle to complete, and the toasted product will automatically be raised.

OR

Push the Operating Lever **UP** to manually raise the product at any time during the toasting cycle.

C. Clearing Jams

WARNING

DISCONNECT THE TOASTER FROM ITS ELECTRICAL POWER SUPPLY BEFORE ATTEMPTING TO CLEAR A JAM.

WARNING

DO NOT TOUCH HOT SURFACES ON THE TOASTER, OR REACH INTO THE TOASTING CHAMBER, UNTIL THE UNIT HAS COOLED THOROUGHLY.

WARNING

NEVER INSERT A KNIFE, FORK, OR SIMILAR OBJECT INTO THE TOASTING CHAMBER. THIS CAN CAUSE AN ELECTRICAL SHOCK OR DAMAGE THE HEATING ELEMENTS.

D. Cleaning

WARNING

DISCONNECT THE TOASTER FROM ITS ELECTRICAL POWER SUPPLY BEFORE CLEANING OR SERVICING.

WARNING

DO NOT TOUCH HOT SURFACES ON THE TOASTER, OR REACH INTO THE TOASTING CHAMBER, UNTIL THE UNIT HAS COOLED THOROUGHLY.

WARNING

WHEN CLEANING THE TOASTER, NEVER APPLY ENOUGH LIQUID TO STAND IN PLACE ON THE UNIT. DO NOT SPRAY, RINSE, OR SUBMERGE THE TOASTER. EXCESSIVE MOISTURE IN THE UNIT WILL CAUSE A SEVERE ELECTRICAL HAZARD AND MAY OTHERWISE DAMAGE THE TOASTER.


CAUTION

DO NOT clean your toaster using abrasive cleaners or pads. Both will scratch and dull the finish.


1. Wipe the exterior of the toaster with a sponge or cloth soaked in hot or warm detergent water. Wipe with a clean, damp cloth to remove the excess detergent, and then wipe again to dry the toaster.
2. Remove the crumb tray, and empty it. Wash the crumb tray in warm detergent water, and rinse it.
3. After the crumb tray is dry, replace it in the toaster.

Model TP209

Wiring Diagram - Terminal Board

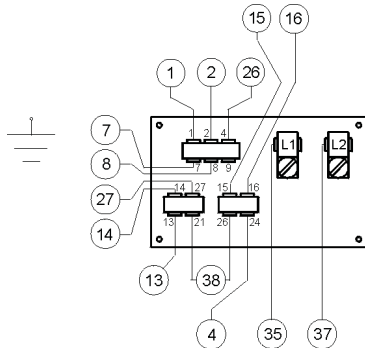

NOTE: All other wiring connections match the TP224 wiring diagram at the bottom of this page.

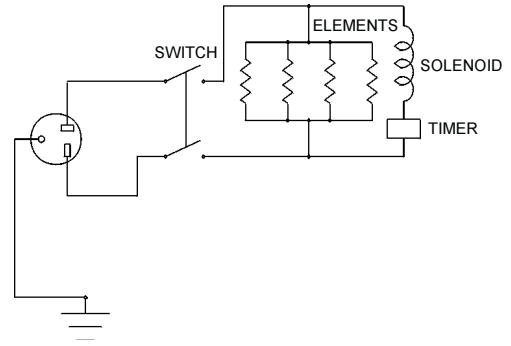


Electrical Specifications


- 120V, 50/60 Hz, 1 Ph, 1.1kW, 9.0A
- Plug type: NEMA 5-15P

Model TP224

Wiring Diagram

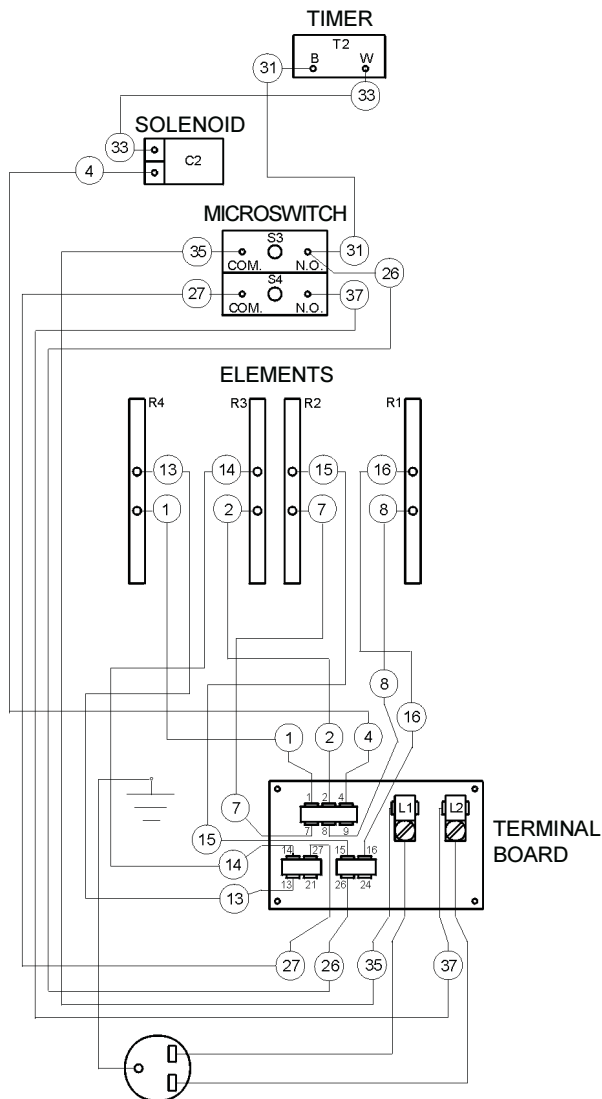

Schematic

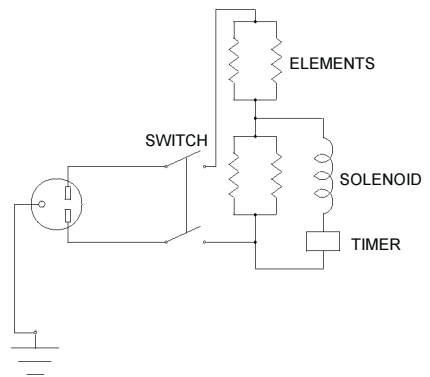


Electrical Specifications

- 208V, 50/60 Hz, 1 Ph, 1.0kW, 4.8A **OR**
- 240V, 50/60 Hz, 1 Ph, 1.3kW, 5.3A
- Plug type: NEMA 6-15P


Model TP409

Wiring Diagram - Terminal Board

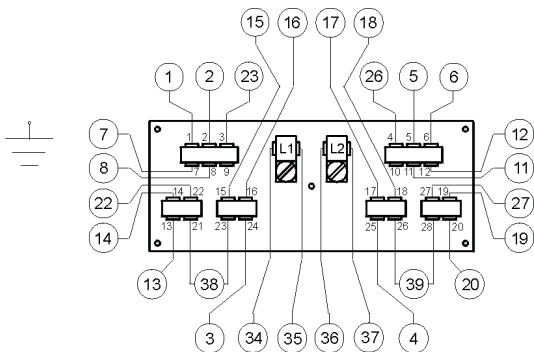

NOTE: All other wiring connections match the TP424/430 wiring diagram at the bottom of this page.

Schematic

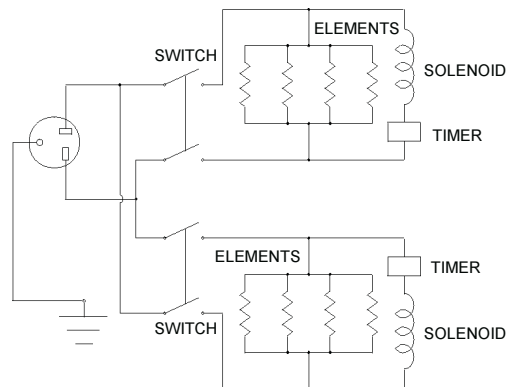


Electrical Specifications


- 120V, 50/60 Hz, 1 Ph, 2.2kW, 18.3A
- Plug type: NEMA 5-20P (USA) OR NEMA 5-30P (Canada)

Models TP424 & TP430

Wiring Diagram

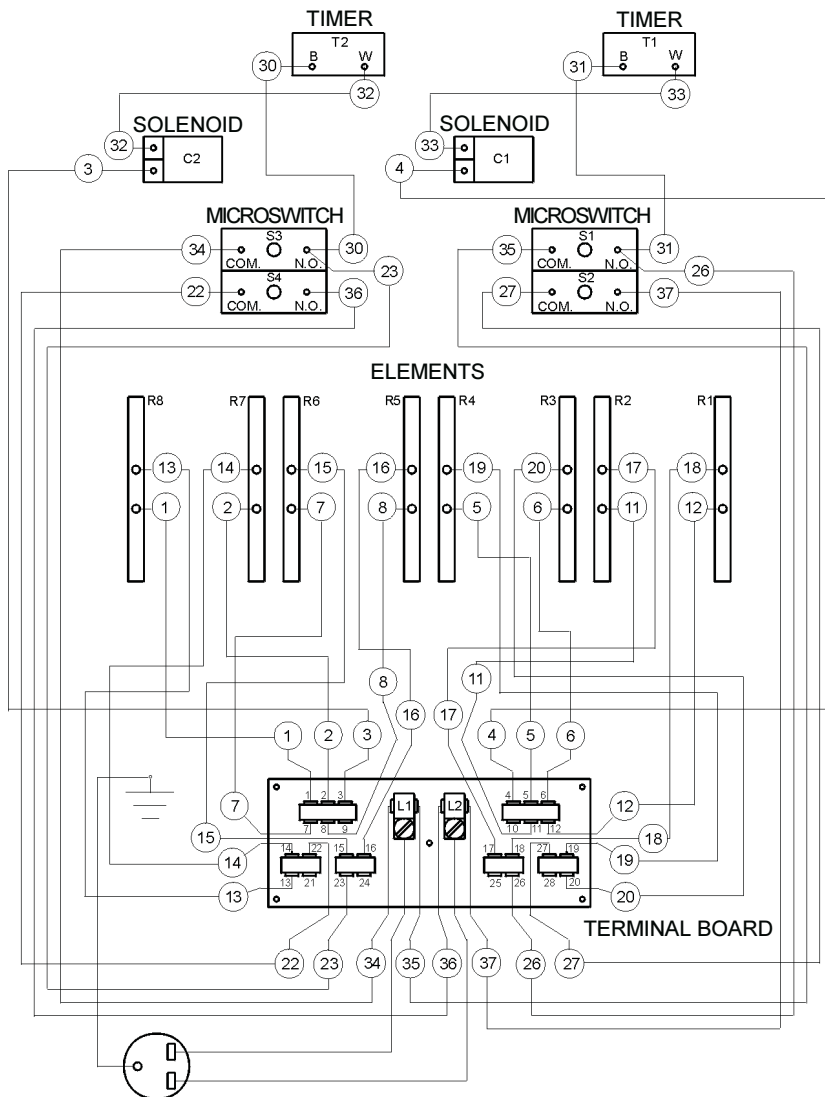

Schematic

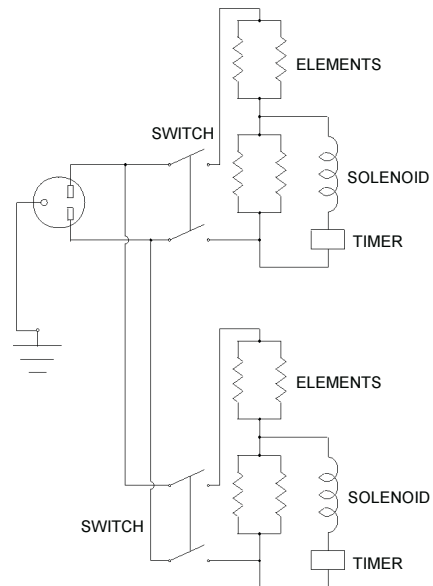

Electrical Specifications

Model TP424:


- 208V, 50/60 Hz, 1 Ph, 2.0kW, 9.6A **OR**
- 240V, 50/60 Hz, 1 Ph, 2.6kW, 10.8A
- Plug type: NEMA 6-15P

Model TP430:

- 208V (Canada), 50/60 Hz, 1 Ph, 2.6kW, 12.5A
- Plug type: NEMA 6-20P


Model HT409

Wiring Diagram - Terminal Board

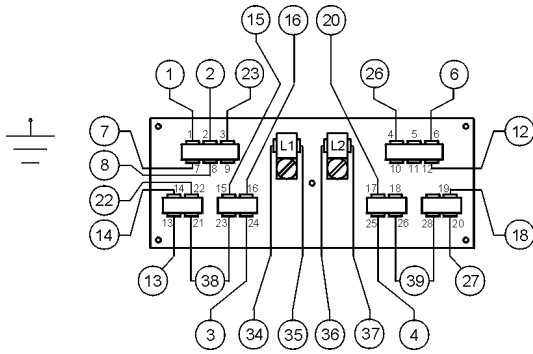

NOTE: All other wiring connections match the HT424 wiring diagram at the bottom of this page.

Schematic

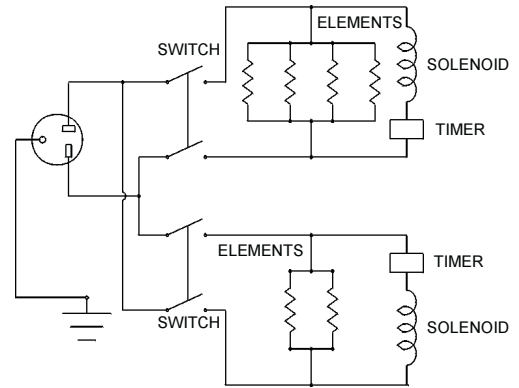


Electrical Specifications


- 120V, 50/60 Hz, 1 Ph, 2.0kW, 16.6A
- Plug type: NEMA 5-20P

Model HT424

Wiring Diagram

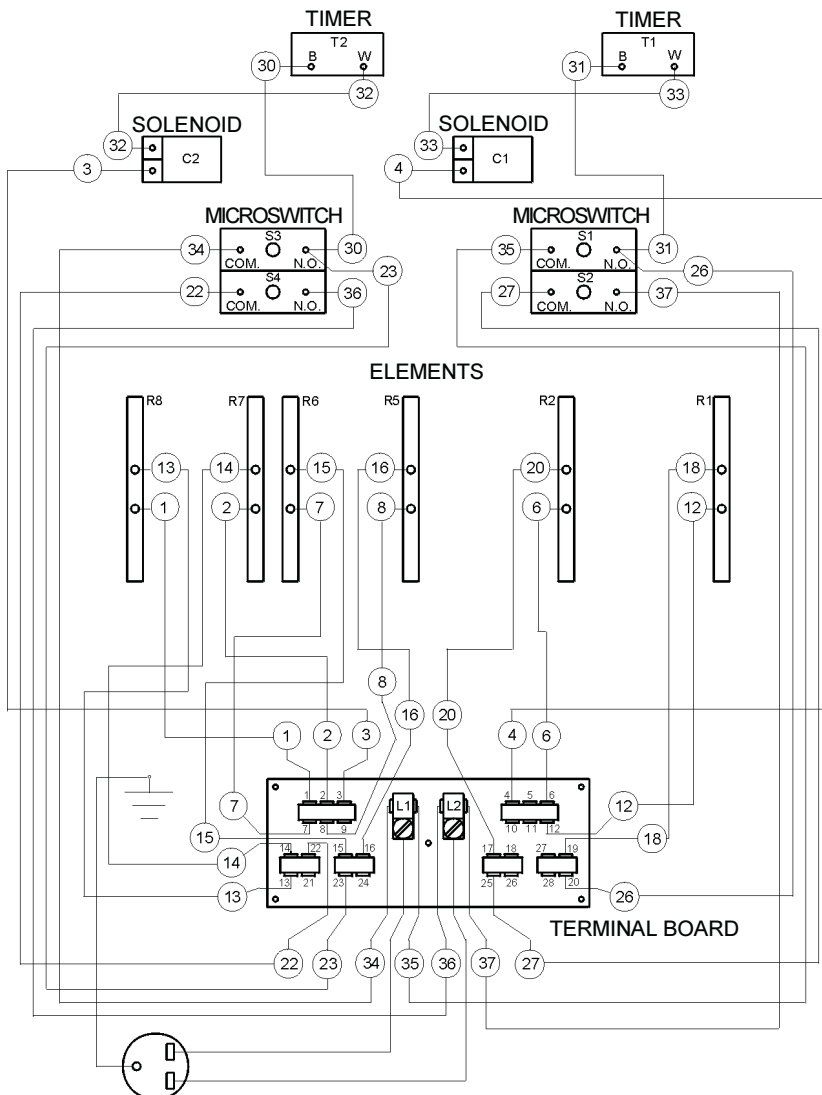

Schematic

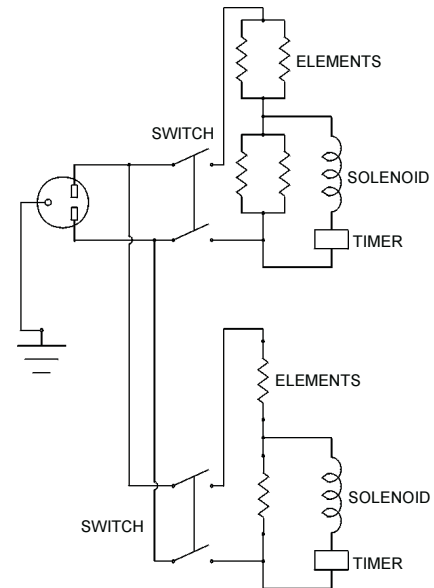


Electrical Specifications

- 208V, 50/60 Hz, 1 Ph, 1.7kW, 8.0A *OR*
- 240V, 50/60 Hz, 1 Ph, 2.2kW, 9.2A
- Plug type: NEMA 6-15P


Model BTW09

Wiring Diagram - Terminal Board

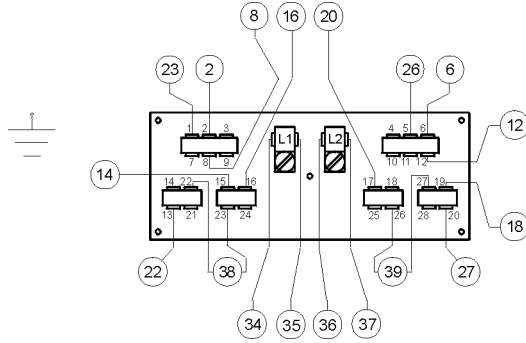

NOTE: All other wiring connections match the BTW24 wiring diagram at the bottom of this page.

Schematic

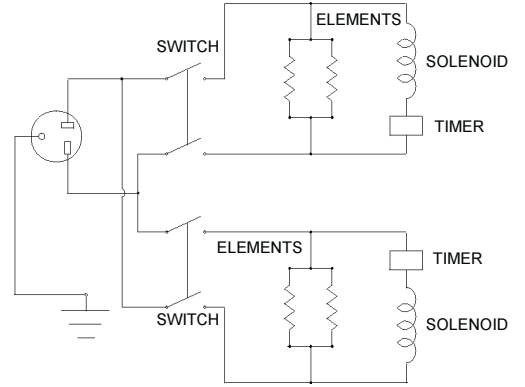


Electrical Specifications


- 120V, 50/60 Hz, 1 Ph, 1.8kW,15.0A
- Plug type: NEMA 5-20P

Model BTW24

Wiring Diagram

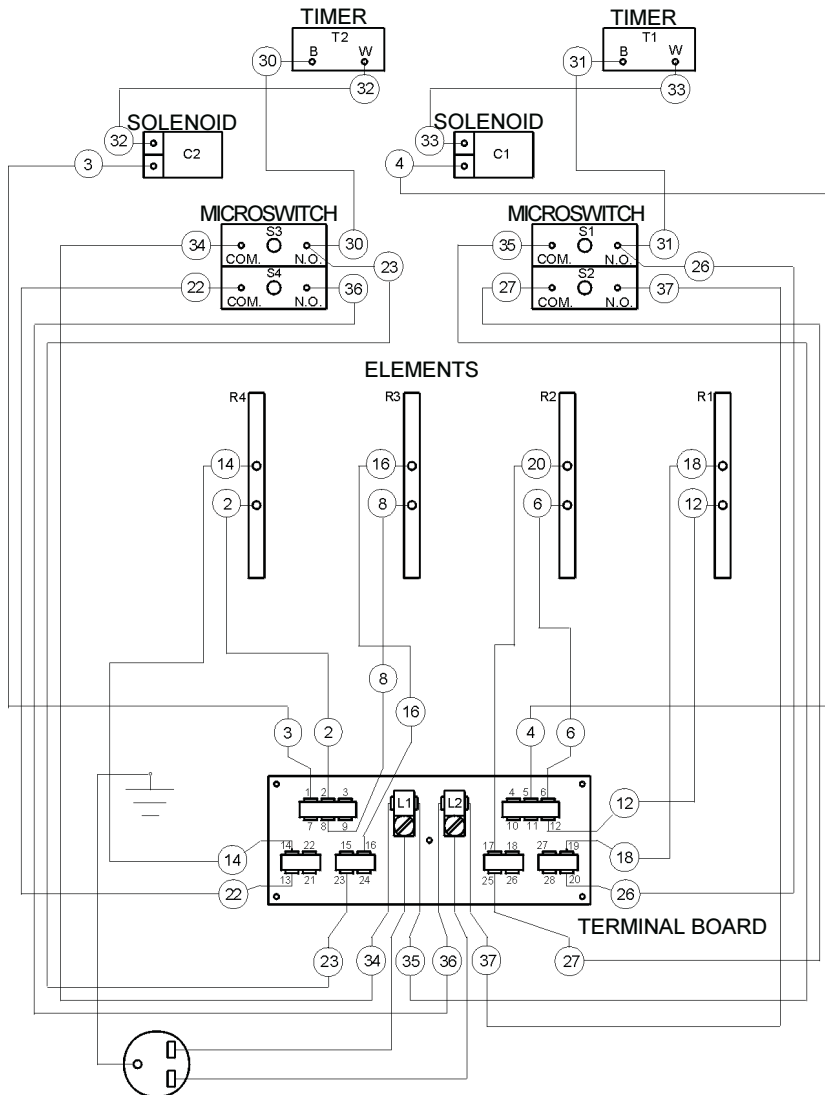

Schematic

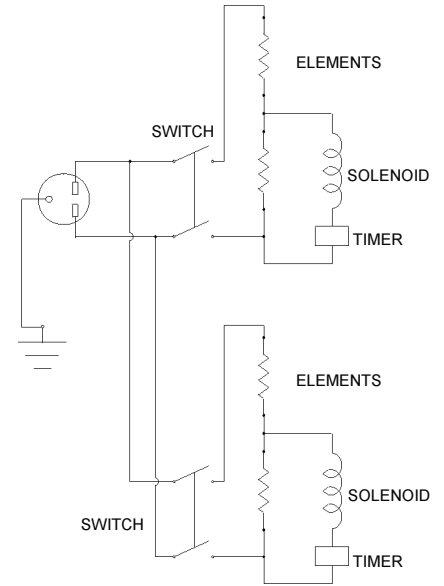


Electrical Specifications


- 208V, 50/60 Hz, 1 Ph, 1.6kW, 7.7A **OR**
- 240V, 50/60 Hz, 1 Ph, 1.8kW, 7.5A
- Plug type: NEMA 6-15P




TOASTMASTER SLOT TOASTER PARTS LIST					
Fig No	Description	TP209		TP224	
		Qty	P/N	Qty	P/N
1	ELEMENT - 120V, 275W	4	2N-3001805	--	--
	ELEMENT - 120V, 325W	--	--	4	2N-3001806
3	TOP CVR W / INSULATION	1	A8-35404	1	A8-35404
4	ASSY, HEAT SHIELDS & GUARDS	1	A8-35289	1	A8-35289
5	STRINGER SUPPORT SPACER, LT	1	A8-32523	1	A8-32523
6	STRINGER SUPPORT SPACER, RT	1	A8-34455	1	A8-34455
7	SCREW, 6 x 3/8", "AB" SLT HWH	4	2C-2000634	4	2C-2000634
8	HEAT SHIELD, FRONT	1	A8-35229	1	A8-35229
9	HEAT SHIELD, REAR	1	A8-35280	1	A8-35280
10	ASSY, ROD & GUARD	4	2V-32527	4	2V-32527
11	PISTON BRACKET & CYLINDER	1	A8-7606061	1	A8-7606061
12	ASSY, PISTON	1	A8-7606063	1	A8-7606063
13	PISTON RING	1	A8-7002280	1	A8-7002280
14	ASSY, SUPPORT & ELEVATOR	1	A8-32540	1	A8-32540
15	BREAD SUPPORT, LT	1	A8-32541	1	A8-32541
16	BREAD SUPPORT, RT	1	A8-32542	1	A8-32542
17	BUSHING	4	2K-7002277	4	2K-7002277
18	EXTENSION SPRING	1	2P-3103246	1	2P-3103246
19	VERTICAL SHAFT	2	2A-7002276	2	2A-7002276
20	SENSOR BRACKET	1	A8-7001563	1	A8-7001563
21	SCREW, 6 x 3/8", "AB" SLT HWH	1	2C-2000634	1	2C-2000634
22	ACTUATOR	1	A8-7606066	1	A8-7606066
23	ASSY, SOLENOID & LATCH	1	A8-7606065	1	A8-7606065
24	ROLL PIN	1	2A-2002510	1	2A-2002510
25	SWITCH & BRACKET	1	A8-7604299	1	A8-7604299
26	NUT, #6-32 KEPS	2	2C-2001327	2	2C-2001327
27	WIRE CLAMP, PLASTIC	1	2C-3101206	1	2C-3101206
28	FRONT PLATE	1	A8-35368	1	A8-35368
29	SCREW, 6 x 3/8" "B" HWH	2	2C-B301A8861	2	2C-B301A8861
30	SCREW, 8-32 x 3/8" FLATHEAD	2	2C-21276-0046	2	2C-21276-0046
31	KNOB, MANUAL RELEASE	1	2R-3101757	1	2R-3101757
32	SCREW, "F" 6-32 x 1/4" PANHD, BLK	1	2C-K1DS213	1	2C-K1DS213
33	KNOB, DARK/LIGHT ADJUSTMENT	1	2R-39382	1	2R-39382
34	DECAL, CONTROL PANEL	1	2M-39413	1	2M-39413
35	CONTROL ENCLOSURE	1	2E-36025	1	2E-36025
36	ASSY, TIMER, 120V	1	2E-7606512	1	2J-7605984
37	CHASSIS TOP	1	A8-35305	1	A8-35305
38	ASSY, CHASSIS BOTTOM & BACK	1	2W-35327	1	2W-35327
39	REAR ELECTRICAL COVER	1	A8-35338	1	A8-35338
40	CABLE CLAMP, 3/8"	1	2C-3B82D8735	1	2C-3B82D8735
41	TERMINAL BOARD	1	2E-35340	1	2E-35340
42	BASE, BLACK PLASTIC	2	2D-3102164	2	2D-3102164
43	PAD, RUBBER FOOT	4	2A-K1DS268	4	2A-K1DS268
44	CRUMB TRAY	1	A8-35400	1	A8-35400
--	ASSY, CORD & PLUG, NEMA 5-15P (USA and Canada)	1	C515	--	--
--	ASSY, CORD & PLUG, NEMA 6-15P (USA and Canada)	--	--	1	2E-1D3S5
--	MANUAL, OWNER'S OPERATING	1	2M-41491	1	2M-41491

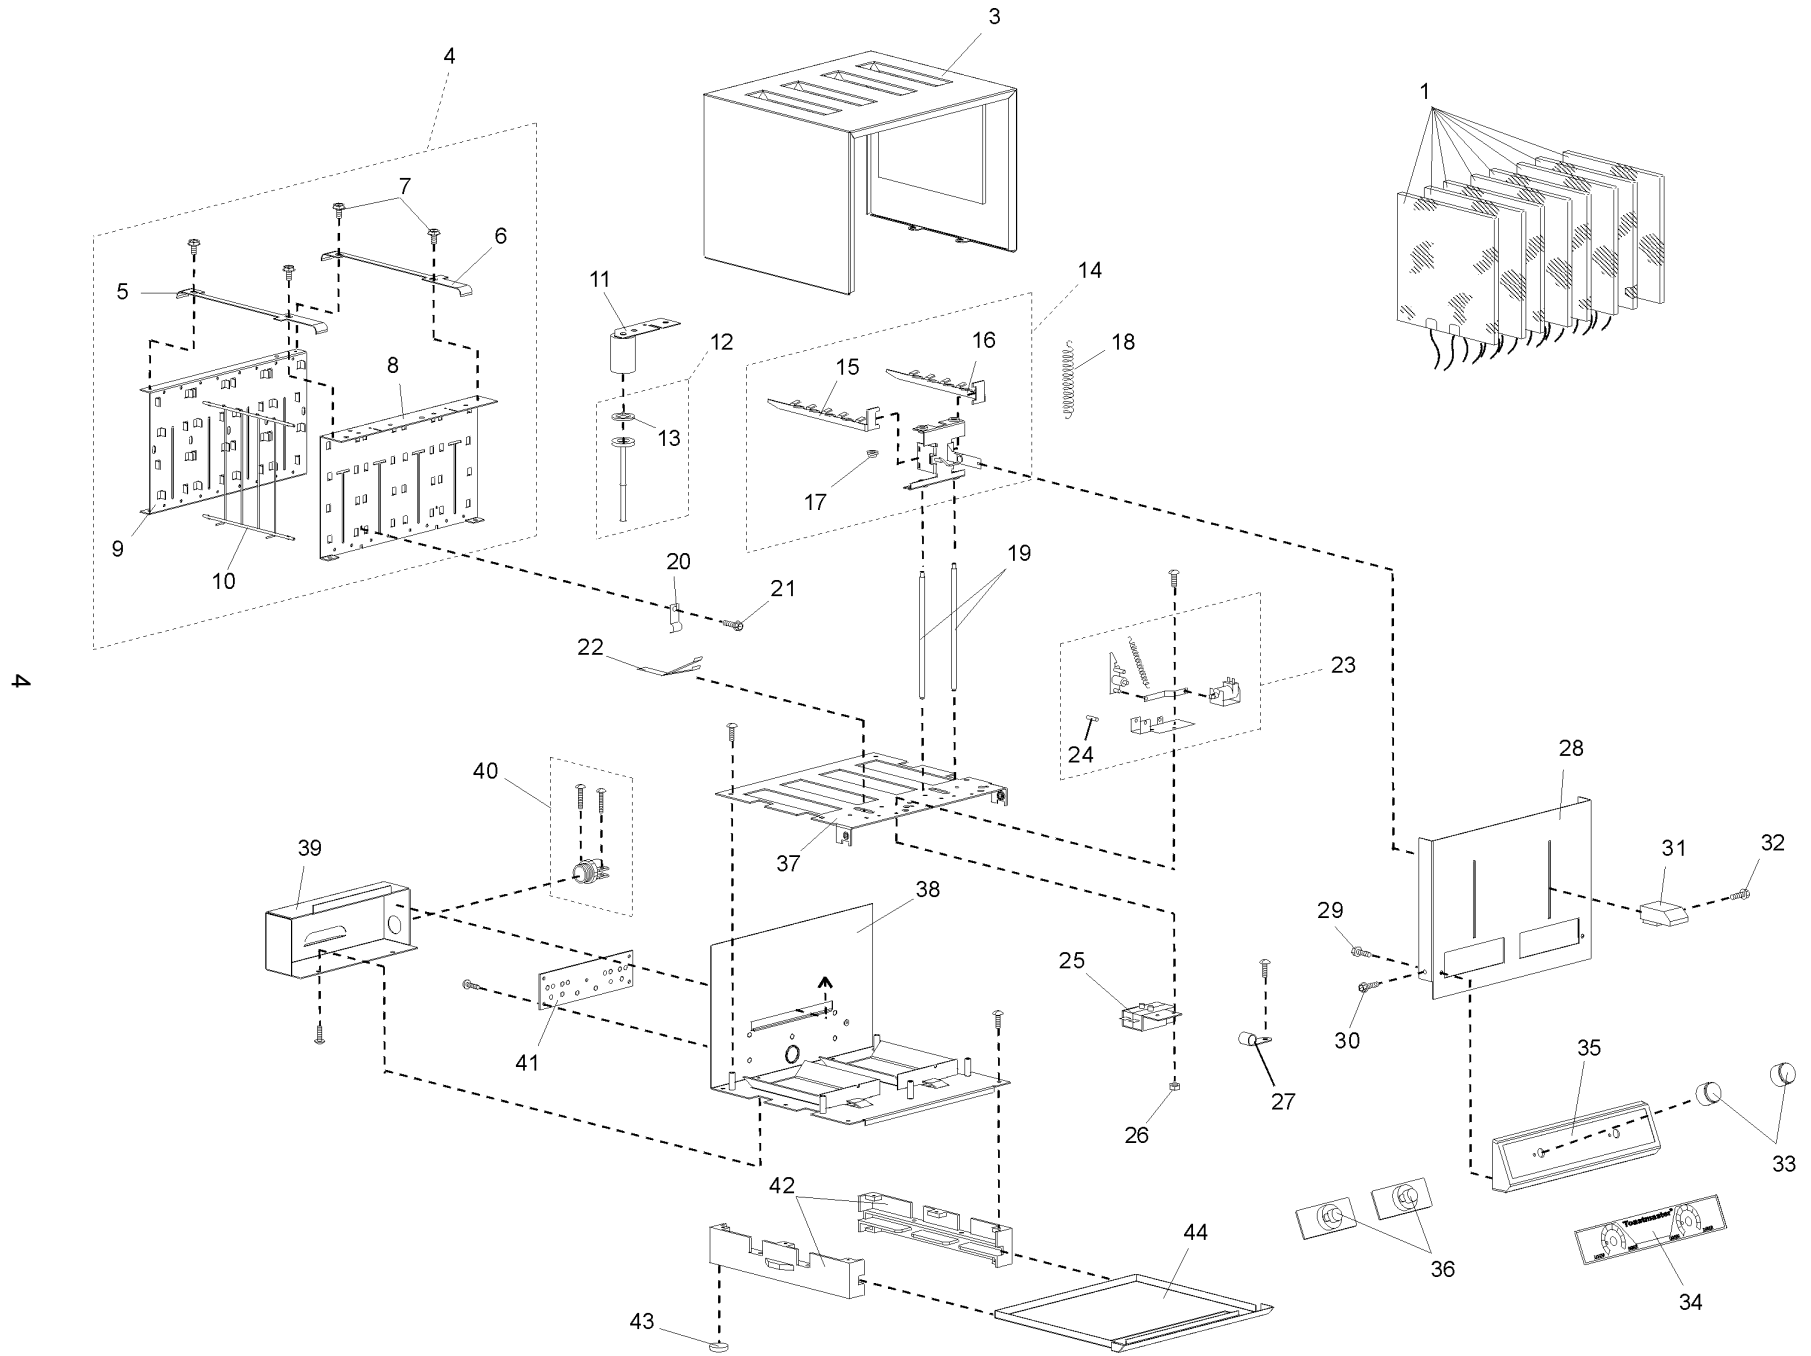

TOASTMASTER SLOT TOASTER PARTS LIST							
Item No	Description	TP409		TP424		TP430	
		Qty	P/N	Qty	P/N	Qty	P/N
1	ELEMENT - 120V, 275W	8	2N-3001805	--	--	--	--
	ELEMENT - 120V, 325W	--	--	8	2N-3001806	--	--
	ELEMENT - 104V, 325W	--	--	--	--	8	2N-3001804
3	TOP CVR W / INSULATION	1	A8-39295	1	A8-39295	1	A8-39295
4	ASSY, HEAT SHIELDS & GUARDS	1	A8-32539	1	A8-32539	1	A8-32539
5	STRINGER SUPPORT SPACER, LT	1	A8-32523	1	A8-32523	1	A8-32523
6	STRINGER SUPPORT SPACER, RT	1	A8-34455	1	A8-34455	1	A8-34455
7	SCREW, 6 x 3/8", "AB" SLT HWH	4	2C-2000634	4	2C-2000634	4	2C-2000634
8	HEAT SHIELD, FRONT	1	A8-32535	1	A8-32535	1	A8-32535
9	HEAT SHIELD, REAR	1	A8-34758	1	A8-34758	1	A8-34758
10	ASSY, ROD & GUARD	8	2V-32527	8	2V-32527	8	2V-32527
11	PISTON BRACKET & CYLINDER	2	A8-7606061	2	A8-7606061	2	A8-7606061
12	ASSY, PISTON	2	A8-7606063	2	A8-7606063	2	A8-7606063
13	PISTON RING	1	A8-7002280	1	A8-7002280	1	A8-7002280
14	ASSY, SUPPORT & ELEVATOR	2	A8-32540	2	A8-32540	2	A8-32540
15	BREAD SUPPORT, LT	1	A8-32541	1	A8-32541	1	A8-32541
16	BREAD SUPPORT, RT	1	A8-32542	1	A8-32542	1	A8-32542
17	BUSHING	4	2K-7002277	4	2K-7002277	4	2K-7002277
18	EXTENSION SPRING	2	2P-3103246	2	2P-3103246	2	2P-3103246
19	VERTICAL SHAFT	4	2A-7002276	4	2A-7002276	4	2A-7002276
20	SENSOR BRACKET	2	A8-7001563	2	A8-7001563	2	A8-7001563
21	SCREW, 6 x 3/8", "AB" SLT HWH	2	2C-2000634	2	2C-2000634	2	2C-2000634
22	ACTUATOR	2	A8-7606066	2	A8-7606066	2	A8-7606066
23	ASSY, SOLENOID & LATCH	2	A8-7606065	2	A8-7606065	2	A8-7606065
24	ROLL PIN	1	2A-2002510	1	2A-2002510	1	2A-2002510
25	SWITCH & BRACKET, LT, RELAY	1	A8-7604299	1	A8-7604299	1	A8-7604299
	SWITCH & BRACKET, RT, RELAY	1	A8-7604713	1	A8-7604713	1	A8-7604713
26	NUT, #6-32 KEPS	4	2C-2001327	4	2C-2001327	4	2C-2001327
27	WIRE CLAMP, PLASTIC	1	2C-3101206	1	2C-3101206	1	2C-3101206
28	FRONT PLATE	1	A8-39249	1	A8-39249	1	A8-39249
29	SCREW, 6 x 3/8" "B" HWH	2	2C-B301A8861	2	2C-B301A8861	2	2C-B301A8861
30	SCREW, 8-32 x 3/8" FLATHEAD	2	2C-21276-0046	2	2C-21276-0046	2	2C-21276-0046
31	KNOB, MANUAL RELEASE	2	2R-3101757	2	2R-3101757	2	2R-3101757
32	SCREW, "F" 6-32 x 1/4" PANHD, BLK	2	2C-K1DS213	2	2C-K1DS213	2	2C-K1DS213
33	KNOB, DARK/LIGHT ADJUSTMENT	2	2R-39382	2	2R-39382	2	2R-39382
34	DECAL, CONTROL PANEL	1	2M-39414	1	2M-39414	1	2M-39414
35	CONTROL ENCLOSURE	1	A8-7604286	1	A8-7604286	1	A8-7604286
36	ASSY, TIMER, 120V w/SENSOR	2	2E-7606512	2	2J-7605984	--	--
	ASSY, TIMER, 104V w/SENSOR	--	--	--	--	2	2J-7604901
37	CHASSIS TOP	1	A8-33310	1	A8-33310	1	A8-33310
38	ASSY, CHASSIS BOTTOM & BACK	1	2W-33309	1	2W-33309	1	2W-33309
39	REAR ELECTRICAL COVER	1	A8-32524	1	A8-32524	1	A8-32524
40	CABLE CLAMP, 3/8"	1	2C-3B82D8735	1	2C-3B82D8735	1	2C-3B82D8735
41	TERMINAL BOARD	1	2E-32323	1	2E-32323	1	2E-32323
42	BASE, BLACK PLASTIC	2	2D-3102164	2	2D-3102164	2	2D-3102164
43	PAD, RUBBER FOOT	4	2A-K1DS268	4	2A-K1DS268	4	2A-K1DS268
44	CRUMB TRAY	1	A8-7001948	1	A8-7001948	1	A8-7001948
--	ASSY, CORD & PLUG, NEMA 5-20P (US only)	1	2E-31785	--	--	--	--
--	ASSY, CORD & PLUG, NEMA 5-30P (Canada Only)	1	2E-46904	--	--	--	--
--	ASSY, CORD & PLUG, NEMA 6-15P (US & Canada)	--	--	1	2E-1D3S5	--	--
--	ASSY, CORD & PLUG, NEMA 6-20P (Canada Only)	--	--	--	--	1	A8-TC0077
--	CORDSET L5-20P 3FT SJTO, (TP409WH-120V)	--	2E-Z15629				
--	MANUAL, OWNER'S OPERATING	1	39533	1	2M-41491	1	2M-41491

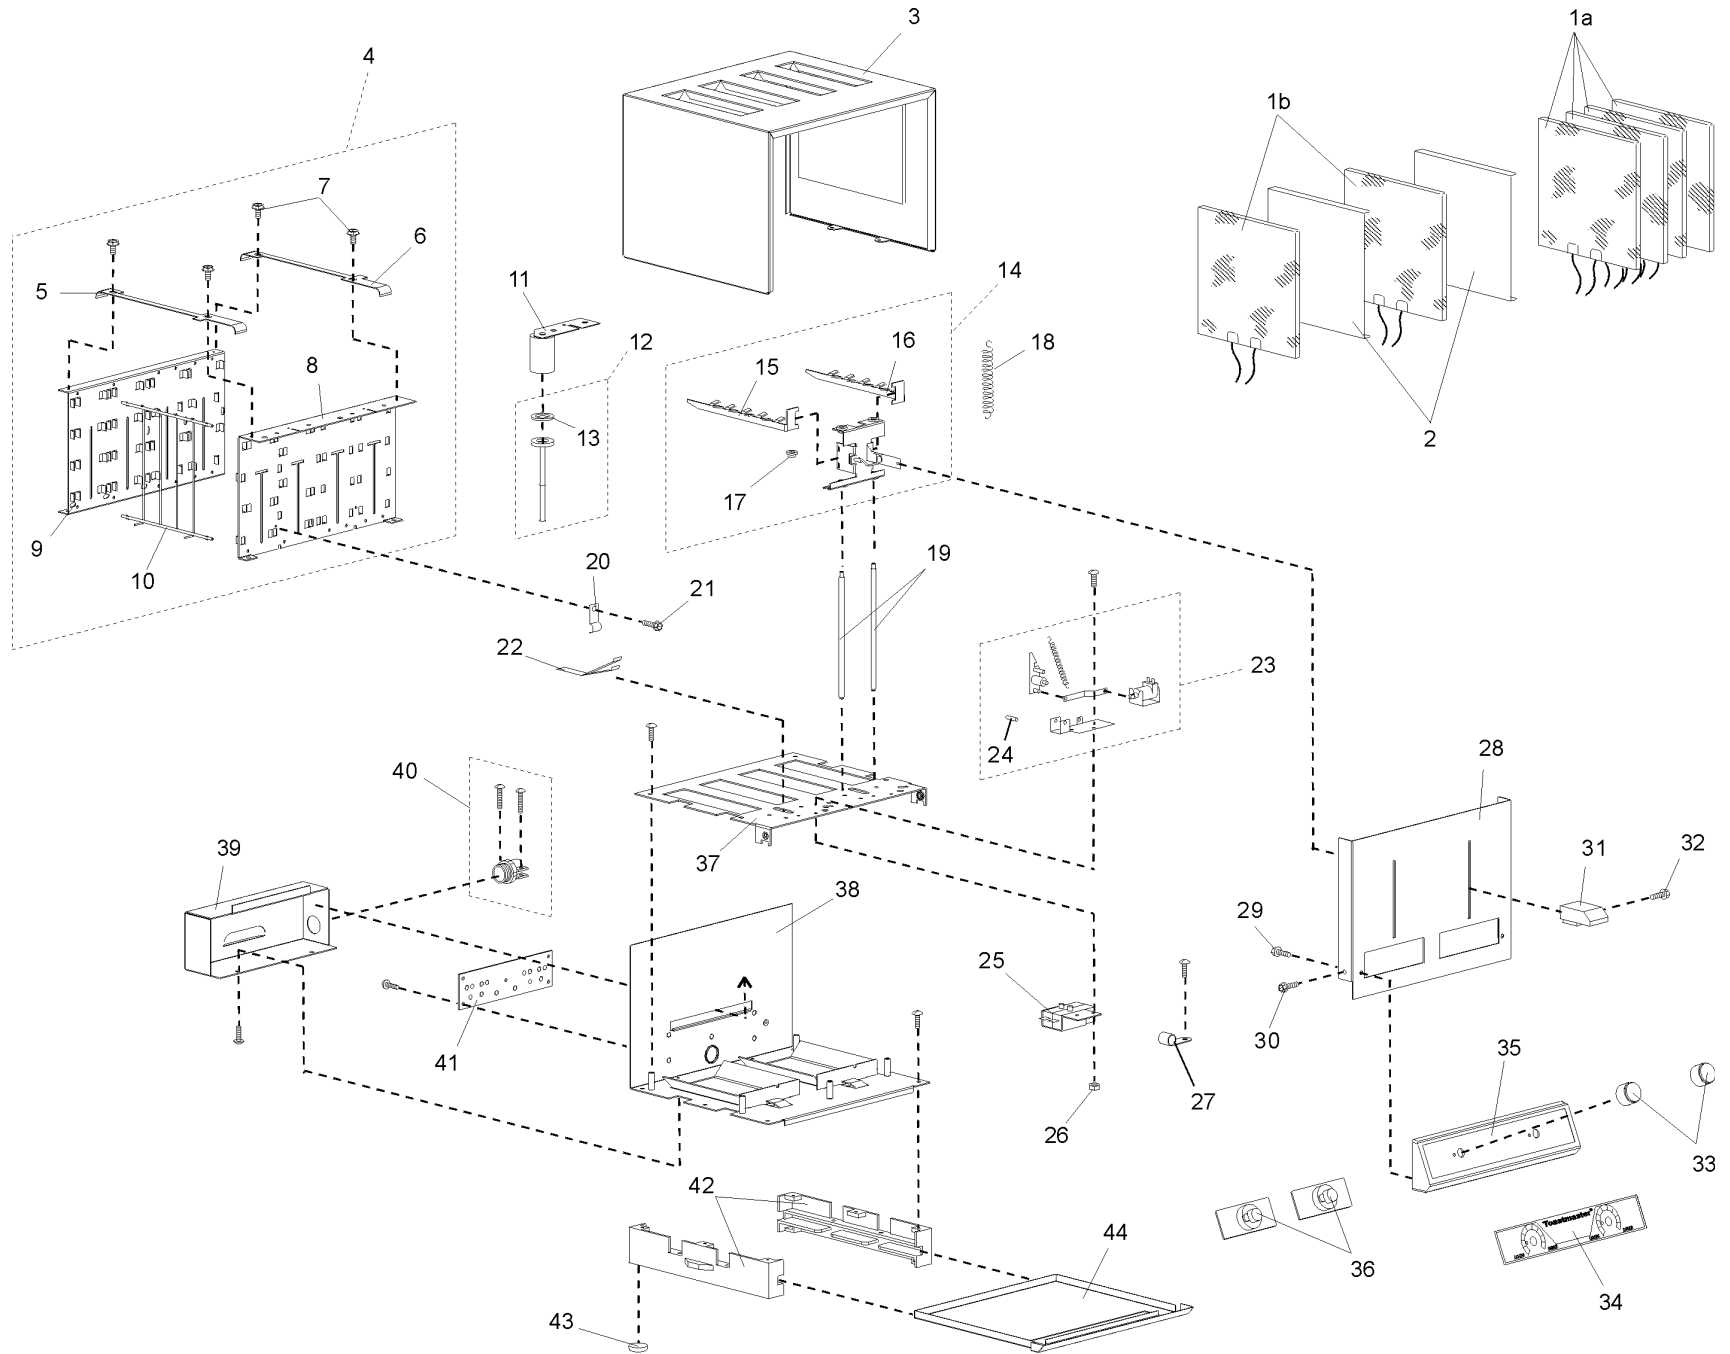

TOASTMASTER SLOT TOASTER PARTS LIST					
Item No	Description	HT409		HT424	
		Qty	P/N	Qty	P/N
1a	ELEMENT, STANDARD SLOT - 120V, 275W	4	2N-3001805	--	--
	ELEMENT, STANDARD SLOT - 120V, 325W	--	--	4	2N-3001806
1b	ELEMENT, EXTRA-WIDE SLOT - 120V, 450W	2	2N-3001878	2	2N-3001878
2	PLATE, ELEMENT REPLACEMENT	2	A8-36853	2	A8-36853
3	TOP CVR W / INSULATION	1	A8-39865	1	A8-39865
4	ASSY, HEAT SHIELDS & GUARDS	1	A8-39873	1	A8-39873
5	STRINGER SUPPORT SPACER, LT	1	A8-32523	1	A8-32523
6	STRINGER SUPPORT SPACER, RT	1	A8-34455	1	A8-34455
7	SCREW, 6 x 3/8", "AB" SLT HWH	4	2C-2000634	4	2C-2000634
8	HEAT SHIELD, FRONT	1	A8-39863	1	A8-39863
9	HEAT SHIELD, REAR	1	A8-39864	1	A8-39864
10	ASSY, ROD & GUARD	4	2V-32527	4	2V-32527
11	PISTON BRACKET & CYLINDER	2	A8-7606061	2	A8-7606061
12	ASSY, PISTON	2	A8-7606063	2	A8-7606063
13	PISTON RING	1	A8-7002280	1	A8-7002280
14	ASSY, SUPPORT & ELEVATOR	2	A8-32540	2	A8-32540
15	BREAD SUPPORT, LT	1	A8-32541	1	A8-32541
16	BREAD SUPPORT, RT	1	A8-32542	1	A8-32542
17	BUSHING	4	2K-7002277	4	2K-7002277
18	EXTENSION SPRING	2	2P-3103246	2	2P-3103246
19	VERTICAL SHAFT	4	2A-7002276	4	2A-7002276
20	SENSOR BRACKET	2	A8-7001563	2	A8-7001563
21	SCREW, 6 x 3/8", "AB" SLT HWH	2	2C-2000634	2	2C-2000634
22	ACTUATOR	2	A8-7606066	2	A8-7606066
23	ASSY, SOLENOID & LATCH	2	A8-7606065	2	A8-7606065
24	ROLL PIN	1	2A-2002510	1	2A-2002510
25	SWITCH & BRACKET, LT	1	A8-7604299	1	A8-7604299
	SWITCH & BRACKET, RT		A8-7604713		A8-7604713
26	NUT, #6-32 KEPS	4	2C-2001327	4	2C-2001327
27	WIRE CLAMP, PLASTIC	1	2C-3101206	1	2C-3101206
28	FRONT PLATE	1	A8-39249	1	A8-39249
29	SCREW, 6 x 3/8" "B" HWH	2	2C-B301A8861	2	2C-B301A8861
30	SCREW, 8-32 x 3/8" FLATHEAD	2	2C-21276-0046	2	2C-21276-0046
31	KNOB, MANUAL RELEASE	2	2R-3101757	2	2R-3101757
32	SCREW, "F" 6-32 x 1/4" PANHD, BLK	2	2C-K1DS213	2	2C-K1DS213
33	KNOB, DARK/LIGHT ADJUSTMENT	2	2R-39382	2	2R-39382
34	DECAL, CONTROL PANEL	1	2M-39414	1	2M-39414
35	WLDMT, CONTROL ENCLOSURE	1	A8-7604286	1	A8-7604286
36	ASSY, TIMER (LEFT SIDE - EXTRA-WIDESLOTS),120/208/240V	1	2J-35736	1	2J-35736
	ASSY, TIMER (RIGHT SIDE - STANDARD SLOTS), 120V		2E-7606512		2E-7606512
37	CHASSIS TOP	1	A8-33310	1	A8-33310
38	ASSY, CHASSIS BOTTOM & BACK	1	2W-33309	1	2W-33309
39	REAR ELECTRICAL COVER	1	A8-32524	1	A8-32524
40	CABLE CLAMP, 3/8"	1	2C-3B82D8735	1	2C-3B82D8735
41	TERMINAL BOARD	1	2E-32323	1	2E-32323
42	BASE, BLACK PLASTIC	2	2D-3102164	2	2D-3102164
43	PAD, RUBBER FOOT	4	2A-K1DS268	4	2A-K1DS268
44	CRUMB TRAY	1	A8-7001948	1	A8-7001948
--	ASSY, CORD & PLUG, NEMA 5-20P (USA and Canada)	1	2E-31785	--	--
--	ASSY, CORD & PLUG, NEMA 6-15P (USA and Canada)	--	--	1	2E-1D3S5
--	MANUAL, OWNER'S OPERATING	1	2M-41491	1	2M-41491

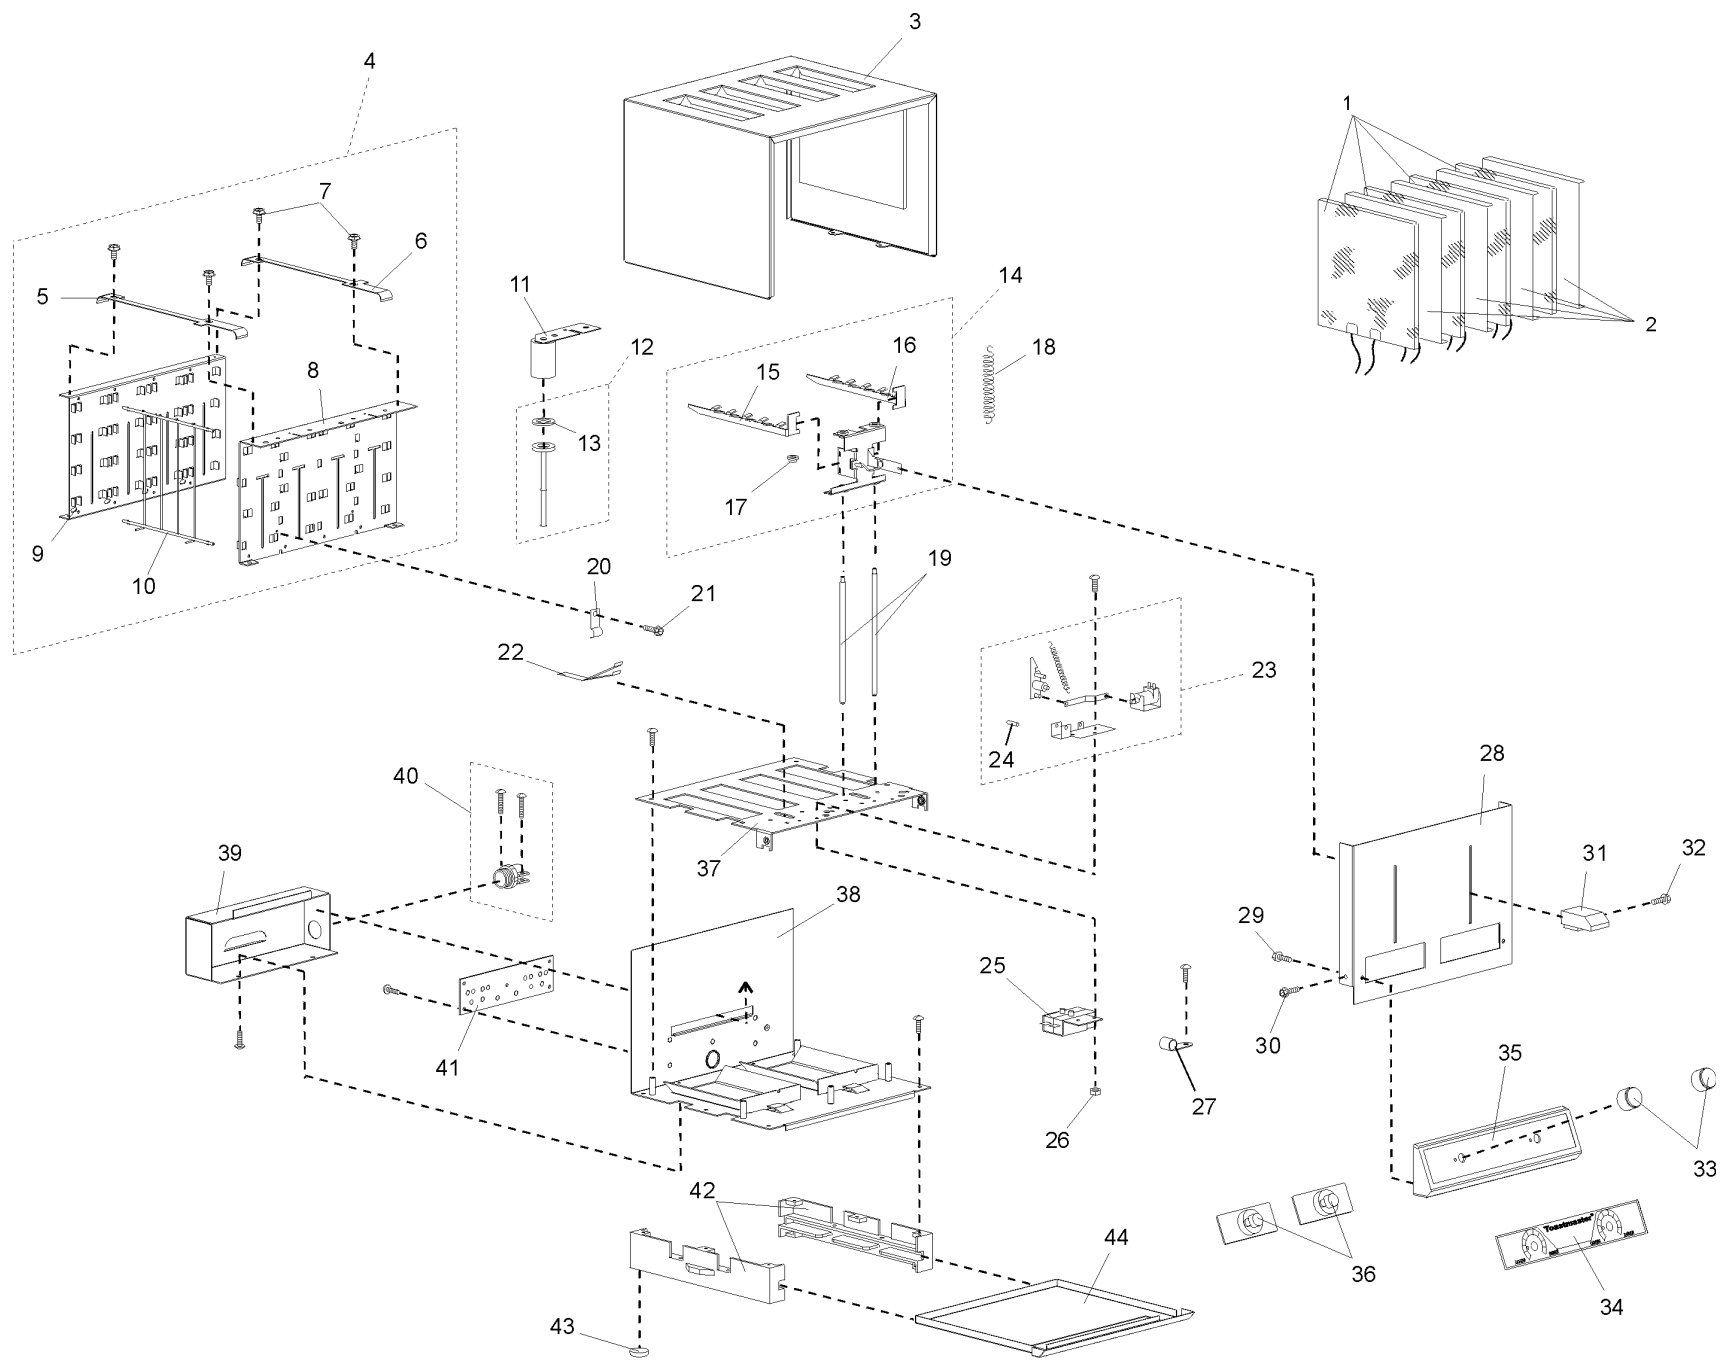

TOASTMASTER SLOT TOASTER PARTS LIST					
Item No	Description	BTW09		BTW24	
		Qty	P/N	Qty	P/N
1	ELEMENT - 120V, 450W	4	2N-3001878	4	2N-3001878
2	PLATE, ELEMENT REPLACEMENT	4	A8-36853	4	A8-36853
3	TOP CVR W / INSULATION	1	A8-39296	1	A8-39296
4	ASSY, HEAT SHIELDS & GUARDS	1	A8-36859	1	A8-36859
5	STRINGER SUPPORT SPACER, LT	1	A8-32523	1	A8-32523
6	STRINGER SUPPORT SPACER, RT	1	A8-34455	1	A8-34455
7	SCREW, 6 x 3/8", "AB" SLT HWH	4	2C-2000634	4	2C-2000634
8	HEAT SHIELD, FRONT	1	A8-36854	1	A8-36854
9	HEAT SHIELD, REAR	1	A8-36855	1	A8-36855
10	ASSY, ROD & GUARD	4	2V-32527	4	2V-32527
11	PISTON BRACKET & CYLINDER	2	A8-7606061	2	A8-7606061
12	ASSY, PISTON	2	A8-7606063	2	A8-7606063
13	PISTON RING	1	A8-7002280	1	A8-7002280
14	ASSY, SUPPORT & ELEVATOR	2	A8-32540	2	A8-32540
15	BREAD SUPPORT, LT	1	A8-32541	1	A8-32541
16	BREAD SUPPORT, RT	1	A8-32542	1	A8-32542
17	BUSHING	4	2K-7002277	4	2K-7002277
18	EXTENSION SPRING	2	2P-3103246	2	2P-3103246
19	VERTICAL SHAFT	4	2A-7002276	4	2A-7002276
20	SENSOR BRACKET	2	A8-7001563	2	A8-7001563
21	SCREW, 6 x 3/8", "AB" SLT HWH	2	2C-2000634	2	2C-2000634
22	ACTUATOR	2	A8-7606066	2	A8-7606066
23	ASSY, SOLENOID & LATCH	2	A8-7606065	2	A8-7606065
24	ROLL PIN	1	2A-2002510	1	2A-2002510
25	SWITCH & BRACKET, LT	1	A8-7604299	1	A8-7604299
	SWITCH & BRACKET, RT		A8-7604713		A8-7604713
26	NUT, #6-32 KEPS	4	2C-2001327	4	2C-2001327
27	WIRE CLAMP, PLASTIC	1	2C-3101206	1	2C-3101206
28	FRONT PLATE	1	A8-39249	1	A8-39249
29	SCREW, 6 x 3/8" "B" HWH	2	2C-B301A8861	2	2C-B301A8861
30	SCREW, 8-32 x 3/8" FLATHEAD	2	2C-21276-0046	2	2C-21276-0046
31	KNOB, MANUAL RELEASE	2	2R-3101757	2	2R-3101757
32	SCREW, "F" 6-32 x 1/4" PANHD, BLK	2	2C-K1DS213	2	2C-K1DS213
33	KNOB, DARK/LIGHT ADJUSTMENT	2	2R-39382	2	2R-39382
34	DECAL, CONTROL PANEL	1	2M-39414	1	2M-39414
35	CONTROL ENCLOSURE	1	A8-7604286	1	A8-7604286
36	ASSY, TIMER, 120/208/240V	2	2J-35736	2	2J-35736
37	CHASSIS TOP	1	A8-33310	1	A8-33310
38	ASSY, CHASSIS BOTTOM & BACK	1	2W-33309	1	2W-33309
39	REAR ELECTRICAL COVER	1	A8-32524	1	A8-32524
40	CABLE CLAMP, 3/8"	1	2C-3B82D8735	1	2C-3B82D8735
41	TERMINAL BOARD	1	2E-32323	1	2E-32323
42	BASE, BLACK PLASTIC	2	2D-3102164	2	2D-3102164
43	PAD, RUBBER FOOT	4	2A-K1DS268	4	2A-K1DS268
44	CRUMB TRAY	1	A8-7001948	1	A8-7001948
--	ASSY, CORD & PLUG, NEMA 5-20P (USA and Canada)	1	2E-31785	--	--
--	ASSY, CORD & PLUG, NEMA 6-15P (USA and Canada)	--	--	1	2E-1D3S5
--	MANUAL, OWNER'S OPERATING	1	2M-41491	1	2M-41491

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

NOTICE

During the warranty period, ALL parts replacement and servicing should be performed by your Toastmaster Authorized Service Agent. Service that is performed by parties other than your Toastmaster Authorized Service Agent may void your warranty.

NOTICE

Using any parts other than genuine Toastmaster factory manufactured parts relieves the manufacturer of all warranty and liability.

NOTICE

Toastmaster reserves the right to change specifications at any time.