



# LXe WAREWASHER | Daily Operation & Cleaning Guide

## DAILY OPERATION:

SCAN TO WATCH INSTRUCTIONAL VIDEO



[hobartcorp.com/lxetraining](http://hobartcorp.com/lxetraining)

**1 BEFORE START-UP**  
Make sure all components are clean and installed properly in the machine.  
*Note: See Step 6 under daily cleaning for assembly instructions.*



**2 CHECK CHEMICAL BOTTLE LEVELS**  
Make sure you have sufficient chemicals for machine operation.  
*Note: On LXeR models, machine will autoprime on start-up.*



**3 CLOSE THE DOOR AND PRESS THE POWER BUTTON**  
FILL and wash temperature will be displayed when machine is filling.  
*WARMING UP & warming up icon are displayed when booster is preheating on LXeH and LXeR models. This preheat could take up to 15 minutes.*



**4 OPEN THE DOOR AND SLIDE THE RACK INTO THE MACHINE**  
READY is displayed on the screen.  
The screen will read READY when the cycle is complete.



**5 CLOSE THE DOOR AND PRESS WASH.**  
WASH, icon & wash temperature displayed during wash cycle.  
RINSE, icon & rinse temperature displayed during rinse cycle  
*Note: On LXeR models, a condensing cycle will be ran for 30 seconds.*



**6 OPEN THE DOOR AND REMOVE THE RACK**  
Allow the ware enough time to dry before storing.



## DAILY CLEANING:

SCAN TO WATCH DAILY CLEANING VIDEO



[hobartcorp.com/lxetraining](http://hobartcorp.com/lxetraining)

**1 DRAIN THE MACHINE**  
Press POWER button and leave the door closed for the water to drain.



**2 MACHINE WILL TURN OFF AFTER DRAINING**  
At the end of the draining cycle, the screen will be blank.



**3 REMOVE UPPER AND LOWER WASH/RINSE ARMS**  
On LXeR, squeeze the two side buttons on the center hub; pull up (or down) to remove arm. On LXeH/C, use hand screw to remove the arms. *Note: Make sure all wash/rinse nozzles are free from obstructions to ensure proper water flow.*



**4 REMOVE AND CLEAN ALL STRAINERS**  
Be sure to remove coarse and fine strainers. Remove any heavy food residues from strainer pans. Once clean, reposition all components.



**5 WIPE DOWN MACHINE**  
Interior and exterior with a damp cloth.  
**⚠ DO NOT USE STEEL WOOL, A SCOURING PAD OR ABRASIVE MATERIAL TO CLEAN THE MACHINE.**



**6 REPOSITION ALL STRAINERS AND WASH/RINSE ARMS**  
Leave door slightly open to allow machine interior to air out overnight.



## GET THE MOST OUT OF YOUR DISHWASHER

**PRE-SCRAP DISHES**  
Make sure to remove large food particles and debris before loading ware into the machine.

**DELIME THE MACHINE**  
Deliming the machine is required when you see clear signs of lime. The unit will alert you when deliming is required. When prompted, follow the instructions on the display. *Note: Delime instructions will vary based on model.*


**USE ONLY COMMERCIAL DETERGENTS AND SANITIZERS**  
Do not use any other chemicals with the dishmachine.

SCAN TO WATCH DELIME VIDEO



[hobartcorp.com/lxetraining](http://hobartcorp.com/lxetraining)

## PROPER RACKING WILL PROVIDE THE BEST CLEANING RESULTS.

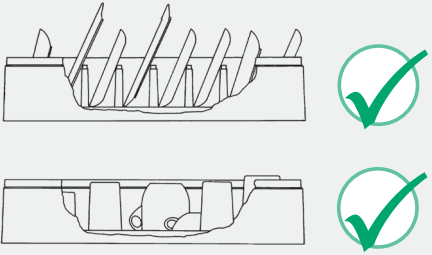

## OPTIONAL SECOND LEVEL RACK KIT

If equipped with the optional second level kit, refer to the following instructions:

- 1 Ensure the rack guide is in place.
- 2 Only use the white wire rack on the upper level guide.
- 3 Only load dishes and silverware on the upper rack.
- 4 Lower rack accommodates all ware types.
- 5 Be sure no obstructions interfere with the wash and rinse arms.

*Note: Failing to use the Hobart second level rack kit to wash two levels could compromise wash performance and damage the machine.*



SCAN TO WATCH 2-LEVEL VIDEO

