



Teacup w/ Lip Handle
 L675DEC#529 (5¾"), 7 oz., 2 Doz.
 L675DEC#528 (6½"), 10 oz., 2 Doz.
Oval Coupe Saucer (fits 528)
 L675DEC#504 (7¼"), 2 Doz.



Stacking Coffee Cup
 L675DEC#522 (2¼"), 6 oz., 2 Doz.
Coffee Coupe Saucer (fits 522)
 L675DEC#502 (6"), 2 Doz.



Cup
 L675DEC#780 (2¾"), 8 oz., 2 Doz.
Saucer (fits 780)
 L675DEC#560 (6¼"), 2 Doz.

Espresso Cup
 L675DEC#525 (1¾"), 2 oz., 4 Doz.
Espresso Coupe Saucer (fits 525)
 L675DEC#505 (4¾"), 4 Doz.

Teacup
 L675DEC#520 (2½"), 6 oz., 2 Doz.
Teacup Coupe Saucer (fits 520)
 L675DEC#500 (6"), 2 Doz.

Espresso Cup
 L675DEC#521 (2"), 3 oz., 4 Doz.
Espresso Coupe Saucer
 L675DEC#501 (4¼"), 4 Doz.



Mug
 L675DEC#506 (4½"), 9 oz., 3 Doz.



Chinese Teacup
 L675DEC#530 (2"), 1 oz., 12 Doz.
Chinese Saucer
 L675DEC#503 (3"), 6 Doz.



Spoon
 L675DEC#945 (5"), 10 Doz.



Teapot w/ Metal Handle
 L675DEC#861 (6¼"), 14 oz., 1 Doz.



 
Sachet / Sugar Packet Holder
 L675DEC#980 (3¾"), 2 Doz.




Creamer
 L675DEC#802 (2"), 3 oz., 2 Doz.
 L675DEC#805 (3"), 6 oz., 2 Doz.



Teapot
 L675DEC#860 (7"), 14 oz., 1 Doz.

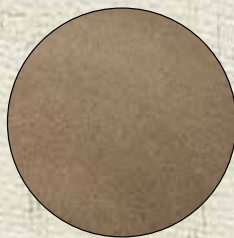

Chestnut: 3059

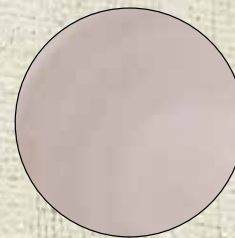 

Sama: 3066



Crimson: 3074