



Teacup w/ Lip Handle

L675DEC#529 (5 ¾" / 14.6 cm), 2 doz.

7 oz. / 20.7 cl

L675DEC#528 (6 ½" / 16.5 cm), 2 doz.

10 oz. / 30 cl

Oval Coupe Saucer (Fits 528)

L675DEC#504 (7 ¼" / 18.4 cm), 2 doz.



Stacking Coffee Cup

L675DEC#522 (2 ¼" / 5.7 cm), 2 doz.

6 oz. / 17.7 cl

Coffee Coupe Saucer (Fits 522)

L675DEC#502 (6" / 15.2 cm), 2 doz.



Cup

L675DEC#780 (2 ¾" / 7 cm), 2 doz.

8 oz. / 23.7 cl

Saucer (Fits 780)

L675DEC#560 (6 ¼" / 15.9 cm), 2 doz.



Mug

L675DEC#506 (4 ½" / 11.4 cm), 3 doz.

9 oz. / 26.6 cl



Espresso Cup

L675DEC#525 (1 ¾" / 4.4 cm), 2 oz., 4 doz.

Espresso Coupe Saucer (Fits 525)

L675DEC#505 (4 ¾" / 12.1 cm), 4 doz.

Teacup

L675DEC#520 (2 ½" / 6.4 cm), 2 doz.

6 oz. / 17.7 cl

Teacup Coupe Saucer (Fits 520)

L675DEC#500 (6" / 15.2 cm), 2 doz.

Espresso Cup

L675DEC#521 (2" / 5.1 cm), 4 doz.

3 oz. / 8.9 cl

Espresso Coupe Saucer (Fits 521)

L675DEC#501 (4 ¼" / 10.8 cm), 4 doz.



Teapot w/ Metal Handle

L675DEC#861 (6 ¼" / 15.9 cm), 1 doz.

14 oz. / 41.4 cl



Sachet / Sugar Packet Holder

L675DEC#980 (3 ¾" x X" / 5.9 cm), 2 doz.



Creamer

L675DEC#802 (2" / 5.1 cm), 2 doz.

3 oz. / 8.9 cl

L675DEC#805 (3" / 7.6 cm), 2 doz.

6 oz. / 17.7 cl



Teapot

L675DEC#860 (7" / 17.8 cm), 1 doz.

14 oz. / 41.4 cl



Salt Shaker

L675DEC#910 (1 ½" / 3.8 cm), 6 doz.

Pepper Shaker

L675DEC#911 (1 ½" / 3.8 cm), 6 doz.



Spoon

L675DEC#945 (5" / 12.7 cm), 10 doz.