



Round Deep Coupe Plate/Bowl
 L675DEC#754 (9" / 22.9 cm), 1 doz.
 L675DEC#755 (10 ¼" / 26 cm), 1 doz.



Soup Bowl
 L675DEC#758 (9" / 22.9 cm), 2 doz.
 21 oz. / 62.1 cl
 L675DEC#759 (11") / 27.9 cm, 2 doz.
 39 oz. / 115.3 cl



Bowl
 L675DEC#950 (4 ¼" / 11.4 cm), 4 doz.
 9 oz. / 26.6 cl
 L675DEC#951 (5" / 12.7 cm), 4 doz.
 15 oz. / 44.4 cl
 L675DEC#952 (5 ¾" / 14.6 cm), 2 doz.
 22 oz. / 65.1 cl



Bowl
 L675DEC#526 (4 ½" / 11.4 cm), 4 doz.
 7 oz. / 20.7 cl



Soup Bowl
 L675DEC#760 (4 ½" / 11.4 cm), 4 doz.
 8 oz. / 23.7 cl
 L675DEC#762 (6" / 15.2 cm), 3 doz.
 14 oz. / 41.4 cl
 L675DEC#763 (7 ½" / 19.1 cm), 2 doz.
 24 oz. / 71 cl
 L675DEC#764 (9" / 22.9 cm), 1 doz.
 42 oz. / 124.2 cl



Dip / Sauce Dish / Ramekin
 L675DEC#941 (2 ½" / 6.35 cm), 12 doz.
 2 oz. / 5.9 cl



Dish
 L675DEC#942 (3 ¼" / 8.3 cm), 10 doz.
 2 oz. / 5.9 cl



Square / Triangular Sauce Dish
 L675DEC#940 (2 ¾" / 7 cm), 6 doz.
 2 oz. / 5.9 cl



3-Compartment Dish
 L675DEC#920 (4 ¾" / 12.1 cm), 2 doz.
 3 oz. / 8.9 cl



Small Tapas Spoon / Dish
 L675DEC#943 (3" / 7.6 cm), 6 doz.
 2 oz. / 5.9 cl



Casserole
 L675DEC#676 (6 ½" / 16.5 cm), 1 doz.
 16 oz. / 47.3 cl



Casserole
 L675DEC#675 (6 ¾" / 17.1 cm), 1 doz.
 8 oz. / 23.7 cl



Rectangular Baker w/ Handles
 L675DEC#990 (6 ½" / 16.5 cm), 7 oz., 1 doz.
 L675DEC#991 (9 ¾" / 24.8 cm), 17 oz., 6 ea.



Mini Baker w/ Handles
 L675DEC#981 (3 ¾" / 9.5 cm), 4 doz.
 3 oz. / 8.9 cl

(continued on next page)