

# Serveware



**97252**  
8 oz. Coupe Dessert Bowl  
H 2 1/8" | D 4"  
1/2 doz. | 3.8 lbs. | 0.17 cu. ft.



**86642**  
16 oz. Shallow Bowl  
H 2 3/8" | D 5 3/4"  
1 doz. | 9.8 lbs. | 0.70 cu. ft.



**973**  
24 oz. Deep Bowl  
H 3" | D 5 3/4"  
1 doz. | 10.8 lbs. | 0.87 cu. ft.



**86488WM18**  
84 oz. Serving Bowl  
H 4" | D 8 3/8"  
4 each | 10.5 lbs. | 0.85 cu. ft.



**63094A**  
125 oz. Serving Bowl  
H 4 7/8" | D 11"  
2 each | 9.6 lbs. | 0.82 cu. ft.



**842F**  
8 in. Luncheon Plate  
H 7/8" | D 8"  
1 doz. | 10.0 lbs. | 0.22 cu. ft.



**86037**  
10 in. Dinner Plate  
H 1" | D 10"  
1 doz. | 16.7 lbs. | 0.38 cu. ft.



**86334**  
13 in. Service Plate/Platter/Charger  
H 1 1/8" | D 13"  
1/2 doz. | 15.8 lbs. | 0.90 cu. ft.



**64191B**  
11 oz. Creamer  
L 4 1/4" | W 3 1/2" | H 3 1/2"  
4 each | 3.4 lbs. | 0.2 cu. ft.



**96934L10**  
Gravy Boat  
L 8 3/4" | W 3 5/8" | H 3 3/4"  
4 each | 5.5 lbs. | 0.28 cu. ft.



**980R**  
10 oz. Cruet w/Glass Stopper  
H 6 1/2" | D 3 3/8"  
1/2 doz. | 4.1 lbs. | 0.37 cu. ft.



**80625R**  
8 oz. Mini Trifle  
H 4 3/8" | D 3 3/4"  
8 each | 6.5 lbs. | 0.38 cu. ft.



**64190AHG17**  
Butter Dish w/Glass Cover  
L 7 1/2" | W 3 1/4" | H 2 1/8"  
4 each | 4.10 lbs. | 0.17 cu. ft.