 




# ELECTRIC SHORT ORDER STOVES

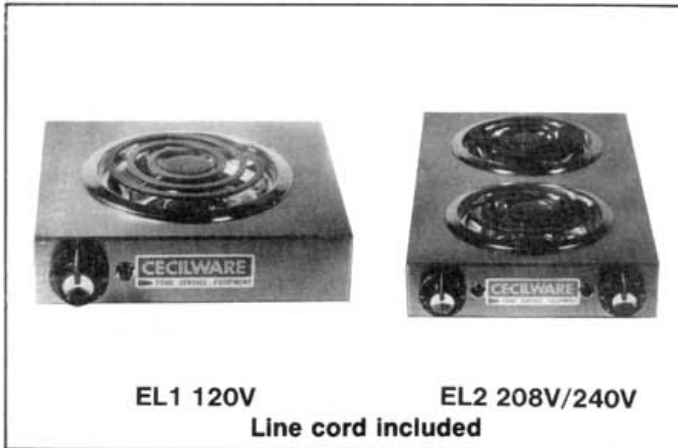

## EL1 and EL2 REPLACEMENT PARTS LIST

Stock No.	Description
B012A	Strain Relief
B077A	Element Receptacle
C765A	Line Cord (EL1)
C770A	Line Cord (EL2)
C777A	Pilot Light
G203A	Plug-In Element (EL1)
G204A	Plug-In Element, 240V (EL2)
L040A	Infinite Switch (EL2)
L164A	Infinite Switch (EL1)
M060A	Infinite Switch Knob
M171A	Leg
T408A	Bottom cover (EL1)
T409A	Bottom cover (EL2)
U494A	Reflector Dish

## SPECIFICATIONS

Model No.	Width	Depth	Height	Ship. Wt.	Volts	KW	Amps	Type Receptacle Req'd.
EL1	10½"	12"	3"	6 lbs.	120	1.1	9.2	15A-120V
EL2	10½"	20"	3"	8 lbs.	240	2.5	10.5	15A-240V
					208	1.9	9.0	(NEMA 6-15)

 
 
NOTE: A separate circuit should be supplied for each of these stoves with a matched circuit breaker or fuse. Check local codes for compliance in installation.

WARNING: WARRANTY IS VOID IF STOVE IS CONNECTED TO ANY VOLTAGE OTHER THAN THAT SPECIFIED. INSTALL STOVE AT LEAST 1" FROM WALL.

## CLEANING INSTRUCTIONS

Heating elements pull out of receptacles for easy cleaning. Remove elements and reflector dishes and wash with hot water and soap as often as necessary. Clean up spills inside the unit, also. Use Ajax and a Scotchbrite pad to keep exterior surfaces free of dirt and blemishes. Rinse and wipe dry; then polish with a soft cloth.

These simple procedures will keep your stove clean and sparkling. A well cleaned stove will give you many years of service.

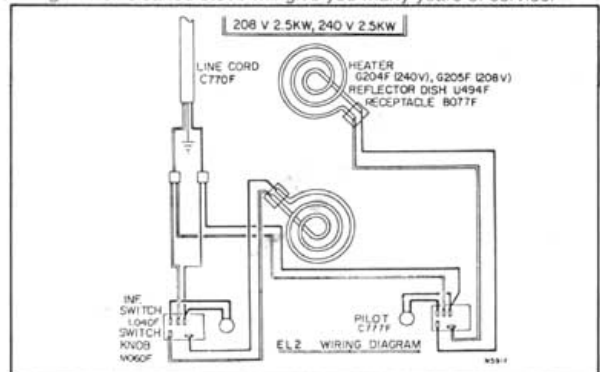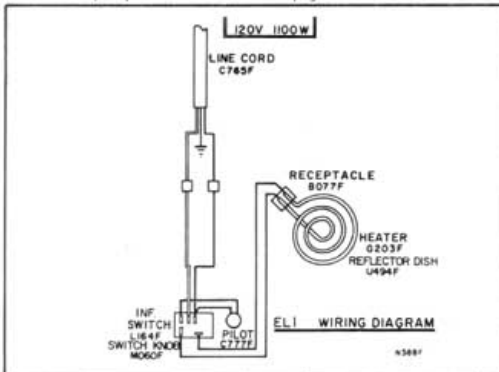

**CECILWARE SELLS VALUE . . .**



43-05 20th Avenue, Long Island City, New York 11105 • (718) 932-1414  
FAX: (718) 932-7860



# HEAVY DUTY COMMERCIAL ELECTRIC SHORT ORDER STOVE



## EL24SH ELECTRICAL SPECIFICATIONS

Volts	KW	*Amps 1 Phase	Amps Per Line 3 Phase			*Type Receptacle Req'd. 1 Phase Only
			L1	L2	L3	
208	3.9	18.7	16.3	9.4	9.4	30A-240V
240	5.2	21.7	18.7	10.8	10.8	(NEMA 6-30R)

Dual voltage units - specify single phase or three phase.

 
\*Cord supplied with 1 phase, NEMA-6.

### EL24SH GENERAL SPECIFICATIONS

Width:	15"
Depth:	25"
Height:	13"
Ship Wt:	32 lbs.

### EL24SH REPLACEMENT PARTS LIST

Stock No.	Description
B000A	Terminal Block
B007A	Strain Relief
B77A	Element Receptacle
C097A	Line cord (Single Phase)
G218A	Solid Heating Element
L313A	Infinite Switch
M202A	Infinite Switch Knob
M172A	Legs (set of 4)
R361A	Bottom Cover

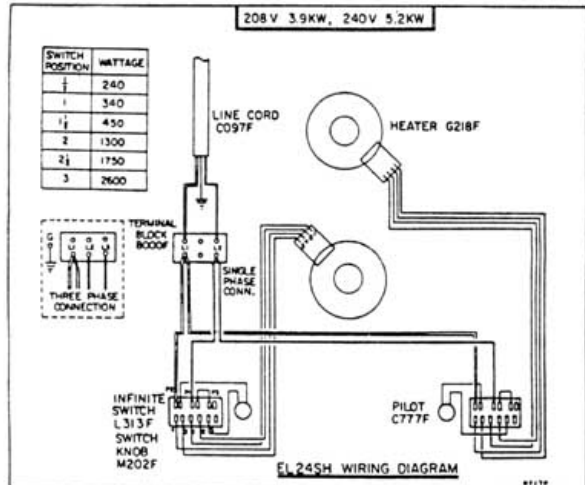

NOTE: A separate circuit should be supplied for each of these stoves with a matched circuit breaker or fuse. Check local codes for compliance in installation.

WARNING: WARRANTY IS VOID IF STOVE IS CONNECTED TO ANY VOLTAGE OTHER THAN THAT SPECIFIED.

### \*\* INSTALLATION INSTRUCTIONS \*\*

WARNING: INSTALL STOVE AT LEAST 1" FROM WALL. DO NOT OPERATE STOVE UNLESS LEGS ARE INSTALLED.

Unpack unit and mount adjustable legs (packed separately in plastic bag.) Level unit by screwing legs up or down as necessary. **For single phase units**, plug line cord into receptacle specified above. **For three phase units**, remove rear cover plate to expose terminal block and grounding lug. Extend 4-wire conduit (flexible or rigid) to terminals through conduit hole on rear of unit and connect as shown on wiring diagram. Replace rear cover plate.

Before using stove for the first time, heat up elements for three to five minutes to burn off protective coating. This also hardens surface of EL24SH solid heating elements.

### \*\* CLEANING INSTRUCTIONS \*\*

Solid heating elements of EL24SH are easily cleaned with a damp cloth after use. Clean up dirt and spills with Ajax and a Scotchbrite pad. After cleaning, rub a few drops of cooking oil into the surface of the elements; then switch on for a few minutes to re-harden.

Use Ajax and a Scotchbrite pad to keep the exterior surfaces of your short order stove free of dirt and blemishes, rubbing with the grain of the stainless steel. Rinse and wipe dry; then polish with a soft cloth.

These simple procedures will keep your short order stove clean and sparkling. A well cleaned stove will give you many years of service.