

# MIX UNDERCOUNTER HOT WATER WITH UNA FONT


> Space-saving countertop font


> Vacuum insulated tank for up to 70% more energy-efficiency







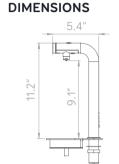

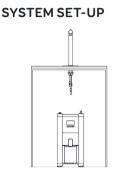

**MIX UC3** - 220v / 110v 1000880US / 1001880







# **FONT SPECS**

| NAME<br>ORDER CODE            | <b>DIMENSIONS INCL. DRIPTRAY</b> (D x W x H inches) | DIMENSIONS EXCL. DRIP TRAY (D x W x H inches) | TAP TO COUNTER<br>(T inches) |
|-------------------------------|---|---|------------------------------|
| <b>1b Unα Font</b><br>1000859 | 6.6 × 4.7 × 11.2                                    | 5.4 × 1.1 × 11.2                              | 9.1                          |

### **BOILER SPECS**

| PRODUCT INFO                | WATER TYPE         | SIZE DIMENSIONS                      | PERFORMANCE SPECS     |            | PLUMBING & ELECTRICAL REQS |                 |        |  |
|-----------------------------|--------------------|--------------------------------------|-----------------------|------------|----------------------------|-----------------|--------|--|
| NAME<br>ORDER CODE          | ADJUSTABLE<br>TEMP | <b>DIMENSIONS</b> (D x W x H inches) | IMMEDIATE<br>DRAW OFF | GAL<br>/HR | CUPS<br>/HR                | POWER           | NEMA   | PLUMBING<br>REQS                             |
| MIX UC3 - 110v<br>1001880   | Y                  | 15.1 x 8.2 x 17.4                    | 0.8 GAL               | 3.6<br>GAL | 75                         | 1.4kW<br>@ 110v | 5-15p  | 2 (0)  |
| MIX UC3 - 220v<br>1000880US |                    |                                      |                       | 7.3<br>GAL | 156                        | 2.8kW<br>@ 220v | L6-20P | 3/8"<br>Compression<br>or 3/8" John<br>Guest |
| MIX UC8 - 220v<br>1000887US |                    | 15.1 × 8.2 × 24.2                    | 2.1 GAL               |            |                            |                 |        |  |


## **PACKAGING**

| NAME<br>ORDER CODE                           | PACKAGING DIMENSIONS<br>(L x W x H inches) | PACKED WEIGHT | QTY/PALLET |
|--|--|---------------|------------|
| <b>1b Una Font</b><br>1000859                | 11.4 x 22.4 x 8.4                          | 4.4lbs        | 30         |
| MIX UC3 - 220v / 110v<br>1000880US / 1001880 | 17.7 × 11.4 × 21.2                         | 25lbs         | 24         |
| MIX UC8 - 220v<br>1000887US                  | 17.7 x 11.4 x 27.5                         | 30.8lbs       | 18         |



# MIX UC3/UC8 WITH 1 OR 3 BUTTON FONT

| <b>1b UNA FONT</b><br>1000859   |   | MIX 3b FONT<br>1000879  |   |  |
|---|---|---|---|--|
| MIX UC3<br>220v - 1000880US<br>110v - 1001880   | MIX UC8<br>220v - 1000887US   | MIX UC3<br>220v - 1000880US<br>110v - 1001880                                     | MIX UC8<br>220v - 1000887US   |  |
| 5.12"-19.7"  130-500mm*  15.1"/385mm  2"/50mm  * Hosing should be trimmed to ensure continuous drop from font to boiler | 5.12" - 19.7"/ 130 - 500mm*  15.1"/385mm  2"/50mm  * Hosing should be trimmed to ensure continuous drop from font to boiler | 2"/50mm  * Hosing should be trimmed to ensure continuous drop from font to boiler | 5.12" - 19.7"/ 130 - 500mm*  15.1"/385mm  2"/50mm  * Hosing should be trimmed to ensure continuous drop from font to boiler |  |

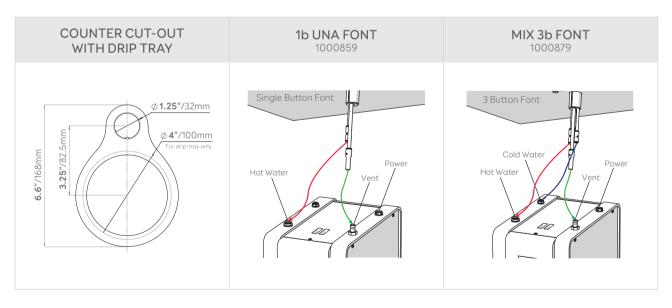



#### MIX UC3/UC8 WITH 1 OR 3 BUTTON FONT

#### **VENTILATION REQUIREMENTS**

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

#### **ELECTRICAL INSTALLATION PROCEDURE**

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-20P moulded power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

#### PLUMBING INSTALLATION PROCEDURE

- > Ensure that the equipment is installed according to local plumbing & water regulations.
- > Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- > Requires inline water filter within your water specifications.
- The machine requires either a 3/8" compression, or 3/8" John Guest water connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- > Turn on water and check for leaks.

#### OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- > Ensure water valve is on.
- > Plug boiler into suitable socket.
- > Turn on the power switch.
- > The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating.
- > The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins).
- The boiler is now ready for use the display will show the button settings and the "Ready" status tick.
- > The boiler may now be used to dispense Hot Water to the preset factory settings.

**NOTE:** Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.